

Troubleshooting Your Trap

Always test your trap before each use. Turn the trap on at the battery box, open the release door, and slide your arm into the trap to break the infrared beam. You will hear the plunger on the solenoid fire. If the plunger does not fire try each of the following steps:

1. Replace the batteries.
2. Disconnect and reconnect the battery box Cable (Fig 1).
3. Using a pair of long nose pliers gently pull the plunger out and release it (Fig 2).

Re-test the trap after each step. Remember that you must turn the switch (Fig 1) off and then back on at the battery box before each attempt.

